

# Installing Cliphanger® Light™ and Autohook™

**IMPORTANT:** Use only new tape on prepared surfaces. Adhesive will not adhere to silicone or leather. Allow 24 hours to bond in temperatures above 70°F before using.


1. Prepare smooth bonding surfaces by cleaning with isopropyl alcohol. Allow to dry. Extra attention is required for dashboards treated with protectant.

2. Phones with flimsy battery doors require use of the included clear battery door reinforcement tabs. Apply one tab along the seam at each side of the battery door. Tabs are reusable up to 5 times.



3. Remove backing from one side of tape. Apply large tape to Cliphanger® Light™ and small tape to Autohook. See notes below. Remove remaining backing and apply to desired surface. Apply firm pressure after placement.


**Note:** Mount Cliphanger® Light™ on back of phone just high enough to place finger through loop. Do not block camera.

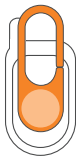


**Note:** If Cliphanger® Light™ blocks camera on “flip” style phones, simply change the angle of the camera lens by holding back the “flip” portion from fully opening.

# Using Cliphanger® Light™

1. Flex open free end of Cliphanger® Light™ with index finger or thumb.

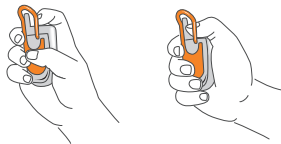

2. Slip free end through pant loop or purse strap and let hang (front pant loop recommended). Pull up and away from pant loop or purse strap to remove.

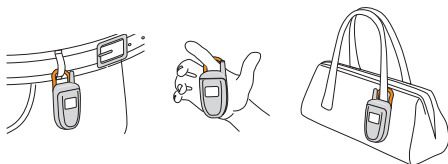

# Using Cliphanger® Autohook™

1. Angle Cliphanger® Light™ into Autohook™ and let hang to lock in place.



2. Rotate upwards and pull to remove.



# Operating Light

1. Rotate bezel to turn light on and off.



ON position



OFF position

# Changing Batteries


1. Use fingernail to gently lift undercut in top edge of bezel while rotating to REMOVE position. Lift to remove bezel.

2. Insert new CR1220 batteries as shown below.

3. Place bezel in REMOVE position, push down and rotate clockwise to secure.



REMOVE position

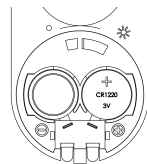

Battery placement