 


Cliphanger is a compact, sturdy tool that hangs on lightly but securely. Despite its simplicity, Cliphanger is loaded with features:

- **Thin profile** minimizes bulk. Won't poke you or cause discomfort, even in sitting positions.
- **Durable plastic** for long life. Helps protect phone; won't scratch metal or paint.
- **Adaptable design** can be affixed to most small devices such as phones, MP3 player, radio, etc.
- **Easy clasp system** enables quick hang-up and removal with a slip of the finger.
- **Convenient loop** provides security while you hold and use your portable device.

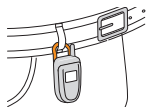

Front pant loop recommended.

Limited Warranty

Cliphanger products are warranted for one year.

Complete warranty information online:

www.cliphanger.com

cliphangerTM



IMPORTANT:

READ DIRECTIONS BEFORE INSTALLATION

Detailed video instructions can be found online.

www.cliphanger.com

Copyright © 2006-2007 Cliphanger, all rights reserved.
Patents pending. Made in China and USA. Rev. 8/07

Installing cliphanger[®]

IMPORTANT: For best adhesion, use only new tape on prepared surfaces that are dry, smooth, hard and non-porous with a temperature of at least 70°F. Allow 24 hours for maximum bond.

1. Prepare bonding surfaces by cleaning with isopropyl alcohol. Extra attention is required for surfaces that have been treated with a silicone protectant. Turn cloth frequently to avoid re-applying residue or protectant.

2. Apply tape to Cliphanger or Autohook and then apply to desired surface. Mount Cliphanger on back of phone, just high enough to place finger through loop. Do not block camera aperture. See "Instructions" online for more about camera phones.



3. Apply firm pressure after placement.

4. If necessary, bond can be broken with a slow, firm twisting motion.

Using cliphanger[®]


See video instructions and camera phone tips online at www.cliphanger.com.

1. Place the device in your *right* hand.

2. Flex open free end of Cliphanger with index finger or thumb.

3. Slip free end through front pant loop or purse strap and let hang.

4. Pull up and away from pant loop or purse strap to remove.

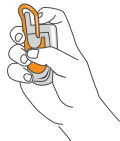

Using Autohook

1. Angle Cliphanger into hook and let hang to lock in place.

2. Rotate upwards and pull to remove.

