


# Installing Cliphanger® with Skin™

**IMPORTANT:** Use only new tape on prepared surfaces.  
Adhesive will not adhere to silicone or leather.

1. Prepare smooth bonding surfaces by cleaning with isopropyl alcohol. Allow to dry.
2. Phones with flimsy battery doors require use of the clear reinforcement tabs. Apply one tab along the seam at each side of the battery door. Tabs are reusable up to 5 times.
3. Put Skin™ on first! Stretch Skin™ over phone making sure to align cut-outs with features on phone.
4. Remove backing from one side of tape and apply to Cliphanger®. Remove remaining backing, and apply to phone through hole in back of Skin™. Make sure tape is not stuck to Skin™. Apply firm pressure after placement. Allow 24 hours to bond in temperatures above 70°F before using.

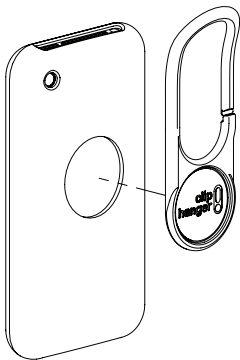

# Using Cliphanger®

1. Flex open free end of Cliphanger® with index finger or thumb.
2. Slip free end through pant loop or purse strap and let hang (front pant loop recommended).
3. Pull up and away from pant loop or purse strap to remove.



**CAMERA USERS:** Cliphanger® uses our new Flex Mount System. Once bonded, Cliphanger® can be rotated slightly to the side of the camera if needed. It will return to its original position upon release.

**REMOVING AND REPLACING SKIN:** Skin™ can be removed if needed without removing Cliphanger®. Peel away bottom edge of Skin™ and lift upwards. To put back on phone, poke Cliphanger® through round hole first then stretch Skin™ over phone.

